

# **Operator's Safety and Service Manual**

# **Cordless Sprayer**

Model: RIVAL

(MODEL C100WO)



SMK Industries Inc 12839 Carpenter Trail Carlisle. IA 50047

Phone: 515-202-0052 Email: john@smksprayers.com Web: www.smksprayers.com

warning This product can expose you to chemicals including Lead, Nickel (Metallic), or 1, 3-Butadiene which are known to the State of California to cause cancer, and Lead or 1,3-Butadiene which is known to the State of California to cause birth defects and other reproductive

# INTRODUCTION

You have purchased a quality SMK product, proudly made in the USA. If you use and maintain your SMK product for what it is intended, you will enjoy many years of safe, reliable service.

The SMK Rival (MODEL C100WO) portable sprayer utilizes Diaphragm pump technology with POM Valves and Geolast diaphragms. Works with DeWalt, Milwaukee or Makita Lithium Ion Batteries depending on which one you selected when ordering. Does not include a Battery.

SMK reserves the right to make changes to this manual without notice

Table of Contents	
Safety Information	2
Introduction	
Safety Precautions	3-4
Warranty	5
Proof of purchase	6
Specifications	
Operation	7
Introduction	7
Before operating the sprayer	
Contents of carton	
Contents illustration	8
Assembly	8
Operating the sprayer	9
Clean up	10
Chemical compatibility	11
Troubleshooting	12
Maintenance	
Service	13
Replacement parts	13

Maintenance of the unit is normally not required with the exception of thoroughly cleaning the entire unit, by flushing the internal components (see clean up on page 10) and cleaning the exterior of the case, after each use.

#### **Service**



#### CAUTION



Service on this unit both within and after the warranty period should be performed only by an authorized service center. To find the service center nearest you Call 515-202-0052

### **Replacement Parts**

For replacement parts Call 515-202-0052.

Page 13

# Safety Information

#### Introduction

This Safety Alert Symbol is used to call attention to items or operations which may be dangerous to those operating or working with this equipment. The symbol can be found throughout this manual and on the unit. Please read these warning and cautions carefully before attempting to operate the unit. Make sure every individual who operates or works with this equipment is familiar with all safety precautions.



#### WARNING



GENERAL WARNING: Indicates information important to the proper operation of the equipment. Failure to observe may result in damage to the equipment and/ or severe bodily injury or death.



#### CAUTION



GENERAL CAUTION: Indicates information important to the proper operation of the equipment. Failure to observe may result in damage to the equipment.

REFERENCES: For details on safety rules and regulations in the United States, contact your local Occupational Safety and Health Administration (OSHA) office. Equipment operated in other countries must be operated and serviced in accordance and compliance with any an all safety requirements of that country. The publication of these safety precautions is done for your information. SMK does not by the publication of these precautions, imply or in any way represent that these are the sum of all dangers present near SMK equipment. If you are operating SMK equipment, it is your responsibility to insure that such operation is in full accordance with all applicable safety requirements and codes. All requirements of the United States Federal Occupational Safety and Health Administration Act must be me when operated in areas that are under the jurisdiction of that United States Department.

### Safety Decals

Carefully read and follow all safety decals. Keep them in good condition. If decals become damaged, replace as required. Decals are available from authorized distributors.

Page 2

# Safety Precautions



#### WARNING



- ⚠ Before attempting to operate the unit, read and understand all safety precautions and warnings.
- ⚠ Do Not spray gasoline or other flammable or combustive materials in this unit
- Do Not use this unit in a combustive environment.
- ⚠ Do not use the unit when tired, ill, or under the influence of alcohol, drugs or medication.
- ♠ Inspect unit before each use for loose, broken, cracked, split, or damaged parts. Do Not operate the unit with loose or damaged component parts.
- Always wear safety glasses or goggles that are marked with ANSI Z87
- ⚠ Use only in daylight or good artificial light.
- Never use unit without the proper factory authorized accessories attached. When using the unit, ensure that the sprayer discharge hose is securely attached.
- ⚠ Do not use Acetone, Lacquers, Lacquer thinners, or Acetate in this unit. These are flammable liquids and will also permanently damage the internal components of the sprayers pump.
- ⚠ Do not modify the unit

#### SPRAYER WILL NOT START

- ✓ If battery is properly seated and fully charged
- √ If On/Off switch is in the off position

#### SPRAYER WILL NOT PRIME

- ✓ If pickup tube Screen or discharge hose is restricted
- √ If Spray tip or Filter on end of Wand is plugged
- √ If you are out of product
- √ For vacuum leak in suction tube Gasket

#### SPRAYER OUTPUT VOLUME REDUCED

- ✓If pickup tube Screen or discharge hose for restrictions
- ✓Sprayer wand and wand tip for restrictions
- √Material is too high in viscosity
- ✓Material is too cold

Refer to the following website for a chemical compatibility chart to ensure that the material you wish to spray is compatible with the Pump Diaphragm, Geolast/BunaN.


### www.shurflo.com/pdf/industry/CCChart.pdf



#### CAUTION



IT IS YOUR RESPONSIBILITY TO ENSURE THAT THE MATERIAL YOU ARE SPRAYING IS COMPATIBLE WITH THE PUMPS COMPONENTS.

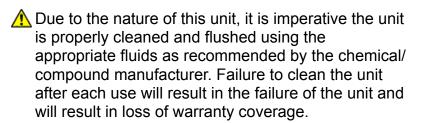

⚠ Do not assume fluid compatibility. If the fluid is improperly matched to the pumps elastomers, a leak or damage to the pump may occur. Be certain that the material being sprayed is compatible with POM, Geolast and Polypropolyne.

Attempting to spray liquids below the manufactures recommended temperatures may affect the sprayers ability to adequately perform. Low temperatures may affect your materials viscosity.

↑ Do not leave material in unit in between uses.

⚠ Do not submerge or expose to excessive moisture.







#### CAUTION



DO NOT ATTEMPT TO SERVICE THE UNIT, YOU WILL VOID THE WARRANTY, CALL THE SERVICE CENTER.

SMK Industries warrants this product to be free from material or workmanship defects for a period of 60 days from the date of manufacture. Alternatively, 60 days from purchase, not to exceed two years from date of manufacture.

Warranty does not apply when:

- Unit is not used within the guidelines of this manual.
- Product or Parts are used or installed outside the SMK authorized service center.
- Incompatible fluids are used.
- Misuse or Abuse.
- Improper or inadequate cleaning of unit after use.

In the event you need to utilize this warranty, the product or part must be returned for examination, postage prepaid, direct to the SMK Industries service center as instructed by calling 515-202-0052. Proof of purchase date and an explanation of the claim must accompany the merchandise. If inspection discloses a defect, SMK will either repair or replace the product with like equipment at SMK's expense. If no defect is found during the inspection, or if the defect resulted from causes not within the scope of SMK's limited warranty, then the user must assume all costs incurred returning and/or storing the product. All products and parts will be tested using SMK testing criteria. Units found to be damaged, altered or otherwise mistreated will not be covered under this warranty. Units found not to be defective are subject to charges to be paid by the returnee.

Page 5

# Clean up



#### CAUTION



As with any type of sprayer, this unit will not function satisfactorily if the unit is not clean. Thoroughly clean the sprayer after EACH use by completely flushing the unit, including all hoses and wand. The cleaning agent should be whatever is recommended by the manufacturer of the material that you are spraying. Pump the cleaning agent through the sprayer until all traces of the previously sprayed material has been removed from the unit.

Page 10

- 1. Remove the spout cover from the container of material that you intend to spray (do not pull out the spout tube).
- 2. Set the sprayer unit on top of the container by guiding the inlet tube into the oipening.
- 3. Set the power switch to the off position.
- 4. Insert the battery into the receptacle.
- 5. Check the sprayer trigger handle to make sure the lever is not locked in the open/on position.
- 6. Set the power switch to the On position and squeeze the trigger handle to begin "priming" the pump. The Pump is self priming and should begin spraying in a few seconds. Priming time will vary depending on the fluid viscosity and temperature. If the pump does not prime within 20 seconds, turn off the power and check to see that all fittings are tight and the Intake Filter is not clogged.
- 7. After liquid is flowing and all air is purged from the lines, release the Handle and the Sprayer will turn off.
- 8. You are now ready to begin spraying your material.
- 9. If Switch light flickers, reduce pump speed. If the speed is not reduced within 2-3 seconds the Sprayer will shut off automatically and an Alarm will sound. To restart, turn the Power Switch Off then back On to reset the Electronics.

Be certain the fluid being pumped is compatible with the pump and Sprayer materials EPDM, POM, Geolast and Polypropylene. For a partial list of compatible fluids see appendix A. If it is not listed or you are unsure, contact your chemical supplier.

The pump is intended for continuous or intermittent duty when the proper operating criteria are met.

Page 9

SMK shall in no event be liable for death, injuries to persons or property or for incidental, contingent, special or

consequential damages of any kind by the reason of use or sale of any defective product or part. This limited warranty covers units distributed in the United States of America only.

This limited warranty is in lieu of all other warranties, expressed or implied, and no other person is authorized to give any other warranty or assume obligation or liability on behalf of SMK Industries, Inc.

Products and parts must be flushed free of all fluids prior to returning to SMK for warranty inspection.

#### PROOF OF PURCHASE

Please retain your dated sales receipt as proof of purchase to validate the warranty period.

#### **SPECIFICATIONS**

Integral pump LEITE Model: GY-2438ZY

Pump motor voltage 12 Volt

Chassis Powder coated steel

Trigger Chapin Wand Chapin Wand tips Chapin

Batteries to use Lithium Ion 18V or 20V

Page 6

**Operation** 

# Before Operating your Sprayer



#### WARNING



Carefully read through this entire manual before attempting to use your new product. Pay close attention to the safety alerts symbols, warnings and cautions.

### **Contents of Carton**

Contents of Carton include:

- 1. Cordless sprayer assembly
- 2. Inlet Suction Tube
- 3. Inlet Tube Gasket
- 4. 6 Ft Spray Hose
- 5. Spray Handle
- 6. 24 Inch Wand
- 7. Hollow Cone and Fan Spray Tips
- 8. Owners manual

(Battery and bucket not included)

Examine all parts to ensure that everything is accounted for and no damage has occurred during shipment. Any damaged or missing part must be replaced before attempting to use this product.

To prepare the unit for operation, assemble the sprayer as follows:

1. Attach the sprayer hose assembly to the Quick Disconnect fittings on the Sprayer and Spray Handle. Attach Wand and desired Spray Tip.



**2.** Attach the Inlet Tube and Gasket to the Garden Hose Fitting located on the bottom of the sprayer.



Page 8

page 7

## Assembly